


Corona Abatement - Body Temperature Monitoring


Reception, entrance, etc.



Contact Output

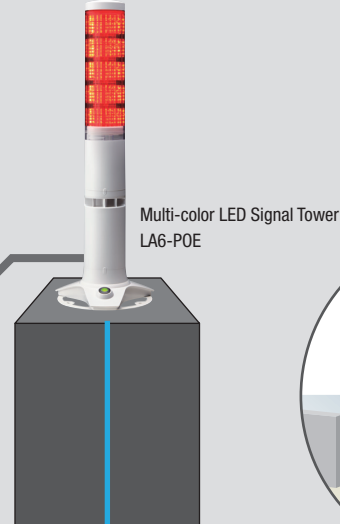


Security Room

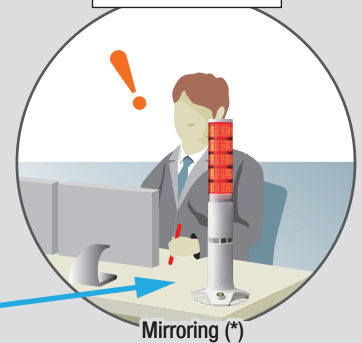

Mirroring (*)

LAN

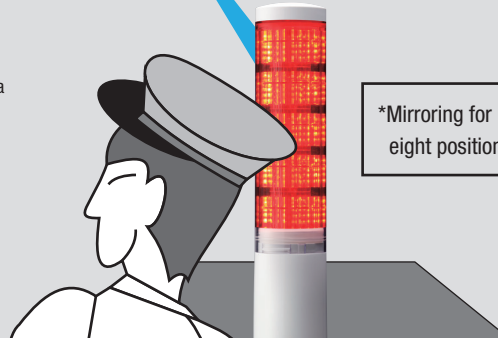

*Mirroring for up to eight positions.

Before

Installed a thermo-camera to check the temperature of people in the room. The camera sounds an alarm when a person with a fever is detected but sometimes the administrator may not notice it. This could lead to secondary infections.

After

The indicator light next to the camera turns on when a person with a fever is detected, quickly notifying the appropriate personnel. The spread of secondary infections can be prevented by curtailing the movement of people with possible infection.

Method

A contact output is received by the Signal Tower when a person with fever is detected and the light turns on or an alarm sounds. Light and sound patterns can be chosen from 21 colors and 11 sounds. In addition, the unit can be placed on a desk and only simple wiring is required with no extra installation work.

Model

Model: LA6-5DSNWB-POE (Multi-color signal tower)